



20 psf Roof Live Load		
Column Pier #	Distance from Hitch	Pier Load (lbs)
1	25.083	1767
2	31.833	1767
3	43.33	1329
4	47.917	1329

20 lb. ROOF LOAD SIDEWALL OPENING PIER LOAD 28' BOX WIDTH	SIDEWALL OPENING (FT) REQUIRED PER LOAD (LBS)				
	3	4	5	6	8
	1175	1330	1485	1640	1950
					2260

FOR 30 lb. & 40 lb. ROOF LOAD REFER TO TABLES 7b & 7c IN THE INSTALLATION MANUAL.

SERVICE DROP LEGEND
TE = ELECTRICAL DROP
W = WATER INLET
D = DOWN PLUMBING DROP
G = GAS INLET

SERVICE DROP LEGEND

[E]	= ELECTRICAL DROP
[W]	= WATER INLET
[D]	= DWV PLUMBING DROP
[G]	= GAS INLET

[illegible]